

To Configure Map Switch

The map switch allows you to switch between two different maps within the Power Commander V.

Select **Power Commander Tools > Configure > Feature Enables and Selection 1 Inputs.**

2Select the **On/Off** box to enable or disable Map Switch.

Note: Map Switch can be used for multiple maps or to turn Auto Tune on/off; however, you cannot use it for both.


Using the drop-down arrow, select which switch input will be used. For more information,

3refer to [Power Commander V Switch Inputs](#).

4Click **OK** to accept the changes.

Or

Click **Cancel** to close the window without changes.

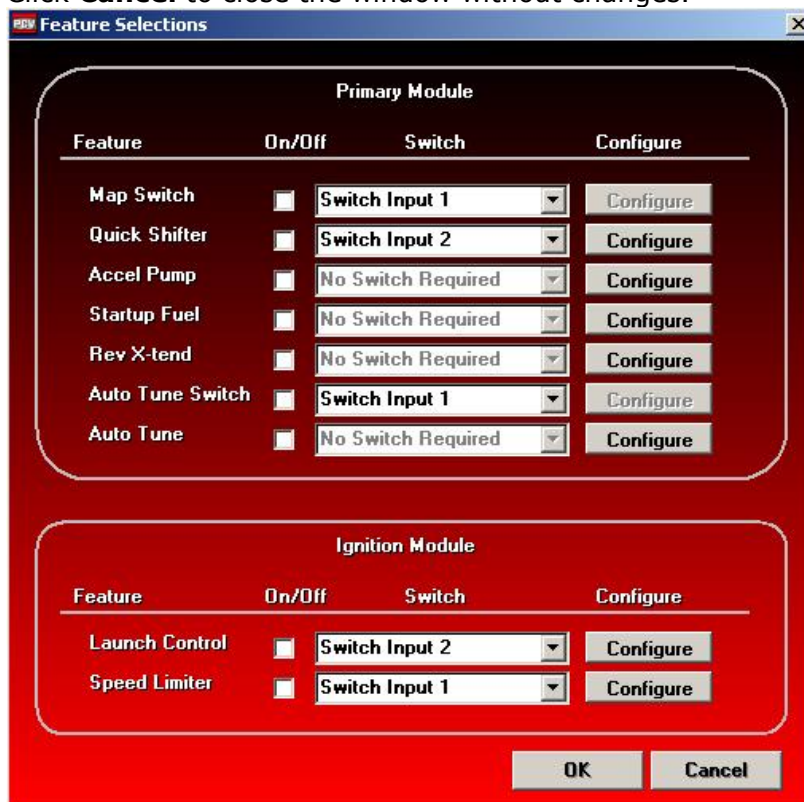

5Once Map Switch is enabled, click **Send Map**.

6Click **Position 1**. This will send the map to position 1.

7To send a map to position 2, click **Send Map**, and select **Position 2**.

This will send the same map to position 2. You can modify this map and send the modified map to position 2.

Or



Modify the map on the screen, click **Send Map**, and select **Position 2**.