


To Configure Rev X-Tend

Some models of Power Commander V allow you to increase the maximum RPM above what the stock electronics allow.

If you have more than one module, you must sync the modules.

Select **Power Commander Tools >Configure >Feature Enables and Selection 1**Inputs.

2Select the **On/Off** box to enable or disable Rev X-tend.

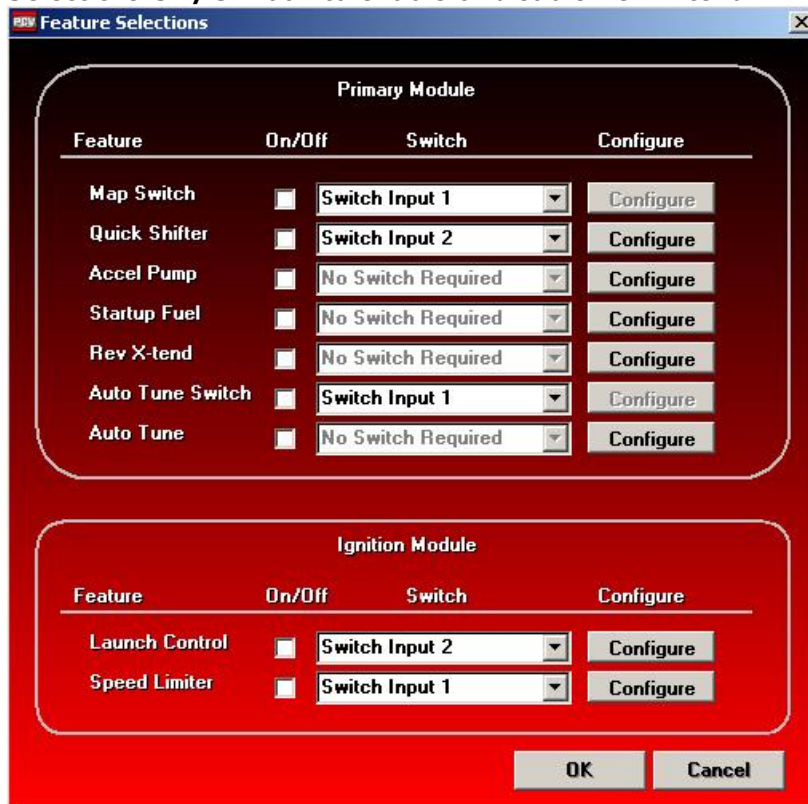

To customize the specific Rev X-tend RPM, please continue below:

3Click **Configure** to open the Rev X-tend Configuration window.

4Enter the Key in the Load Key text box.

Before entering the key, all devices must be powered up either with a USB cable to each module or with the vehicle running.

You will need a key to activate the Rev X-Tend feature. The key is available from the manufacturer Dynojet directly.

5Click **Load Key**.

6Click **OK** to accept the changes.

Or

Click **Cancel** to close the window without changes.

